

# Angelcare®

AC420 Sound Monitor

## **Re-connecting Instructions:**

Hold in the CH button on the Parent Unit until the Satellite Icon starts flashing ( ). Immediately hold in the small clear button at the top of the Nursery unit in until the big circle (halo) starts flashing.

Push the clear button on the Nursery Unit in and out and make sure that the channels are changing on the Parent Unit.

Choose a channel and then hold in the Clear Button until the big circle (halo) stops flashing on the Nursery unit to re-connect.



**For personal assistance contact our  
Customer Care line: 011 791 6309  
[www.angelcare-monitor.co.za](http://www.angelcare-monitor.co.za)**

# Angelcare®

AC420 Sound Monitor

## **Re-connecting Instructions:**

Hold in the CH button on the Parent Unit until the Satellite Icon starts flashing ( ). Immediately hold in the small clear button at the top of the Nursery unit in until the big circle (halo) starts flashing.

Push the clear button on the Nursery Unit in and out and make sure that the channels are changing on the Parent Unit.

Choose a channel and then hold in the Clear Button until the big circle (halo) stops flashing on the Nursery unit to re-connect.



**For personal assistance contact our  
Customer Care line: 011 791 6309  
[www.angelcare-monitor.co.za](http://www.angelcare-monitor.co.za)**